

Device #1 CONNECT TO THE HOTSPOT'S WIFI

- Press and hold the Power button to power on and off the device
- Make sure WiFi is enabled on the device you would like to connect (smartphone, computer, tablet, etc.)
- Select the WiFi name that is displayed on the hotspot's LCD screen. Use the Arrow buttons to navigate through the Menus and the Check Mark button to make your selection
- Enter the WiFi password exactly as it is shown on the screen. The password is case-sensitive. Your device should now be connected to the hotspot's WiFi network
- If the battery dies you will need to charge the hotspot by connecting the provided cable to the USB port and plugging it in to a wall outlet.
Do NOT leave the device plugged in for extended periods. Only charge the device until the battery is charged and then unplug the device

Device #2 CONNECT TO THE HOTSPOT'S WIFI

- Press and hold the Power button to power on and off the device
- Make sure WiFi is enabled on the device you would like to connect (smartphone, computer, tablet, etc.)
- Select the WiFi name that is displayed on the hotspot's LCD screen. Use the Arrow buttons to navigate through the Menus and the Check Mark button to make your selection
- Enter the WiFi password exactly as it is shown on the screen. The password is case-sensitive. Your device should now be connected to the hotspot's WiFi network
- If the battery dies you will need to charge the hotspot by connecting the provided cable to the USB port and plugging it in to a wall outlet.
Do NOT leave the device plugged in for extended periods. Only charge the device until the battery is charged and then unplug the device

Device #3 CONNECT TO THE HOTSPOT'S WIFI

- Press and hold the Power button to power on and off the device
- Make sure WiFi is enabled on the device you would like to connect (smartphone, computer, tablet, etc.)
- Select the WiFi name that is displayed on the hotspot's LCD screen. Use the Arrow buttons to navigate through the Menus and the Check Mark button to make your selection
- Enter the WiFi password exactly as it is shown on the screen. The password is case-sensitive. Your device should now be connected to the hotspot's WiFi network
- If the battery dies you will need to charge the hotspot by connecting the provided cable to the USB port and plugging it in to a wall outlet.
Do NOT leave the device plugged in for extended periods. Only charge the device until the battery is charged and then unplug the device

Device #4 CONNECT TO THE HOTSPOT'S WIFI

- Press and hold the Power button to power on and off the device
- Make sure WiFi is enabled on the device you would like to connect (smartphone, computer, tablet, etc.)
- Select the WiFi name that is displayed on the hotspot's LCD screen. Use the Arrow buttons to navigate through the Menus and the Check Mark button to make your selection
- Enter the WiFi password exactly as it is shown on the screen. The password is case-sensitive. Your device should now be connected to the hotspot's WiFi network
- If the battery dies you will need to charge the hotspot by connecting the provided cable to the USB port and plugging it in to a wall outlet.
Do NOT leave the device plugged in for extended periods. Only charge the device until the battery is charged and then unplug the device

Device #5 CONNECT TO THE HOTSPOT'S WIFI

- Press and hold the Power button to power on and off the device
- Make sure WiFi is enabled on the device you would like to connect (smartphone, computer, tablet, etc.)
- Select the WiFi name that is displayed on the hotspot's LCD screen. Use the Arrow buttons to navigate through the Menus and the Check Mark button to make your selection
- Enter the WiFi password exactly as it is shown on the screen. The password is case-sensitive. Your device should now be connected to the hotspot's WiFi network
- If the battery dies you will need to charge the hotspot by connecting the provided cable to the USB port and plugging it in to a wall outlet.
Do NOT leave the device plugged in for extended periods. Only charge the device until the battery is charged and then unplug the device